

Quick Reference Guide

SYSTEM OKAY TANK OKAY SENSOR OKAY LINE OKAY

M1 LEFT M2 RIGHT M3 M4 ←

| | | | |
|---------------------|--------------------|--------------------|----------------------|
| A N PRODUCT 1 | B O GROSS 2 | C P LEVEL 3 | CANCEL |
| D Q TANK 4 | E R ULLAGE 5 | F S WATER 6 | G T UP +/- |
| H U MENU 7 | I V ALARM 8 | J W REPORT 9 | K X DOWN SPACE |
| ACK SHIFT | L Y TEST 0 | M Z CHECK . | ENTER |

TO DISPLAY ULLAGE



E R
ULLAGE
5

the **ULLAGE** key (*ullage* is the volume that could be added to a tank without overflowing it)

Up to 4 tanks are displayed
...press **DOWN** for other tanks
also see **PRODUCT** and **TANK**

K X
DOWN
SPACE

TO DISPLAY WATER LEVEL



F S
WATER
6

the **WATER** key. Up to 4 tanks are displayed

...press **DOWN** for other tanks

also see **PRODUCT** and **TANK**

K X
DOWN
SPACE

TO DISPLAY

- GROSS
 - WATER VOLUME
 - NET
 - ULLAGE
- BY PRODUCT (MANIFOLD & TANK)**



A N
PRODUCT
1

the **PRODUCT** key. Choose the product by pressing a menu select key (*M1 — M4*) ...manifold tank data is displayed first
...press **DOWN** for individual tanks
See **TANK** also

K X
DOWN
SPACE

TO DISPLAY

- GROSS
- WATER VOLUME
- LEVEL
- WATER LEVEL
- NET
- ULLAGE
- TEMPERATURE
- PERCENT FULL

BY TANK



D Q
TANK
4

the **TANK** key. Choose a tank by pressing a menu select key (*M1 — M4*)
...press **DOWN** for more data (Level, Temperature, Water Level, and % Capacity). Also see **PRODUCT** key

K X
DOWN
SPACE

TO DISPLAY TANK DATA

Press the **PRODUCT** key. Choose the product by pressing a menu select key (*M1 — M4*). Press **DOWN** to see individual tank data.

TO DISPLAY TIME & DATE



M Z
CHECK
.

the **CHECK** key. Also press the **CHECK** key, **M4** key and **DOWN** key to check the: Tank Sentinel Part No., Software Version Number, and Hardware status.

Special Keys

Alarm (Annunciator) Test tests the Alarm Horn

ALARM TEST

Cancel

use to exit / back-out of a menu or to cancel before the enter key is pressed

CANCEL

Enter

use to enter an input or password

ENTER

ACK Shift

use to Silence the Alarm Horn (see other side) and to shift the input character type before a key is pressed at the keypad (to input a value, password code, or text string). See the Operator's Guide about using the **ACK SHIFT** key.

ACK SHIFT

TO DISPLAY GROSS VOLUME



B O
GROSS
2

the **GROSS** key. Up to 4 tanks are displayed

...press **DOWN** for other tanks

also see **PRODUCT** and **TANK**

K X
DOWN
SPACE

TO DISPLAY PRODUCT LEVEL



C P
LEVEL
3

the **LEVEL** key. Up to 4 tanks are displayed

...press **DOWN** for other tanks

also see **PRODUCT** and **TANK**

K X
DOWN
SPACE



Special Keys (Continued from other side)

Menu Select Keys (**M1 — M4**) are under the display. Press to make a choice or to enter menus (example uses: to print reports, view alarm lists, or to show leak test status).

When inputting data, such as a password, the **M1** key can be used to move the cursor left, **M2** to move the cursor right, and **M4** to ← back-space over (delete) a character.

Alarm Annunciator & Alarm Status Row



Green light – on when power is on

Yellow light – on with System **WARNING** alarms
...flashes when alarms are new / not acknowledged

Red light – on with Tank, Sensor, & Line **ALARMS**
...flashes when alarms are new / not acknowledged

NOTE # 1 Warning or Alarm lights turn off when cleared alarms are acknowledged and removed from the alarm list (**unless an alarm is still active**).

NOTE # 2 The Report Printer is activated / prints on alarm. Alarms may be programmed to sound the solid-tone or beeping Annunciator Alarm Horn. **But, regardless of how the programming was done, the alarm status row lights will always flash when a new warning or alarm exists. Pay close attention to the Alarm Status lights!**



INCON® and Tank Sentinel® are registered trademarks of

INTELLIGENT CONTROLS INC. • PO BOX 638 • SACO ME 04072

TO SILENCE THE ALARM HORN

 
Press



the **ACK SHIFT** key ...if the console requires a password, the display will read: **ENTER PASSWORD:** (input the code and press **ENTER**).

TO VIEW AN ALARM LIST

Press a menu select key –



– under **WARNING** or **ALARM** messages (see example display at right). Use the **UP / DOWN** keys to show alarms in the alarm list **until all alarms have been viewed** (Active, Cleared or Transient alarms can be in the alarm list).

TO REMOVE CLEARED ALARMS FROM THE ALARM LIST

View an Alarm List (see above) and press the **ACK SHIFT** key to remove Cleared alarms. The display will show **OKAY** and the Alarm status row lights go out if no alarms exist (see Note 1). A service call may be required to clear an Active Alarm. Call

Number(s):

TO START A LEAK TEST except TS-504/508

Press



TEST then **M2** and a menu select key (**M1 — M4**) under the type of test you want to start (0.1 gph or 0.2 gph tank or line test).

Select a tank or line number by using (**M1 — M4**) keys... use **DOWN** key to see other tank or line numbers that you may choose from.

TO CANCEL / ABORT A LEAK TEST

 
Press **TEST** then **M3** and a menu select key (**M1 — M4**) under the type of test you want to abort.

TO SHOW LEAK TEST STATUS

Press **TEST** then **M1** ...use the **DOWN** key to view the status of other tank or line leak tests.

– See other side and the Operator's Guide –

INCON Tank Sentinel® INTELLIGENT CONTROLS Quick Reference Guide

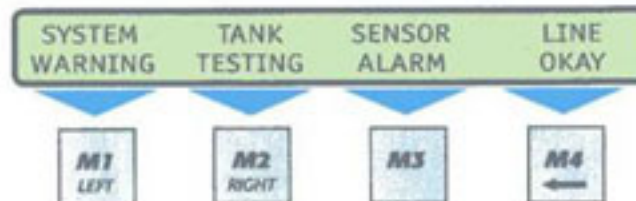

| | | | |
|----------------------------|---------------------------|---------------------------|-----------------------------|
| A N PRODUCT 1 | B O GROSS 2 | C P LEVEL 3 | CANCEL |
| D Q TANK 4 | E R ULLAGE 5 | F S WATER 6 | G Y UP +/- |
| H U MENU 7 | I V ALARM 8 | J W REPORT 9 | K X DOWN SPACE |
| ACK SHIFT | L Y TEST 0 | M Z CHECK . | ENTER |

TO ENTER THE SETUP MODE

Press



MENU then the **M1** key. If the console requires a password (highly recommended), the display will read:

ENTER PASSWORD: (input the code and press **ENTER**)
See the Operator's Guide about Language and Upgrade menu choices (Data Log is for diagnostic use only).

TO PRINT or FAX A REPORT

Press



REPORT and then the **DOWN** key to view report types. Press **M1 — M4** to make a choice.

Press **M1** to send the report to the printer, or press **M2** to send the report to a remote FAX machine. The FAX / Modem hardware is an optional extra cost item.

Key Strokes to Print a (tank) Leak Estimate Report: **REPORT M4 M1 M1 - M4 / DOWN**
1 2 3 4 / 5